
EXCELLENCE OPTO. INC.

6. Please read the Wire-Instruction first, and then connect the power cables to the right positions. Be sure to screw tightly in order to avoid disconnection.

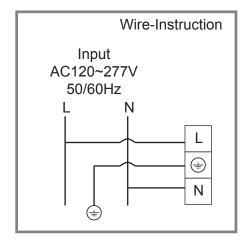



7. Close the cover back to luminaire.













LED Area and Barn Light

Installation Guide

Procedures of Installation

Please confirm your local voltage and related electronic specifications matched the device before installation. The diameter of pole for e-lite star LED Area and Barn Light is between 1.66 inches to 2.375 inches.

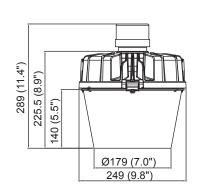

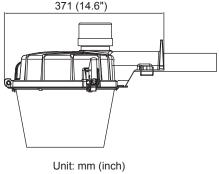

Dimensions: 11.4" x 9.8" x 14.6" Weight: < 8.8 lbs.


EXCELLENCE OPTO. INC.

1. Remove the luminaire and acrylic refractor from carton.





2. Twist-lock the shorting cap to the luminaire.

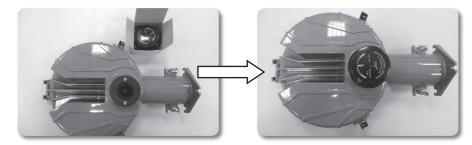

3. Install the acrylic refractor to the luminaire.



Loose the captive screw




Align fixed point and twist in acrylic refractor



Rotate acrylic refractor to align notch and fasten screw tightly.


EXCELLENCE OPTO. INC.

4. Unfasten the lineman latch clips and loosen the screws on arms.

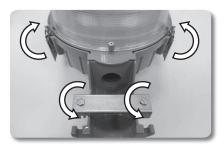




5. Fix the luminare to the pole.

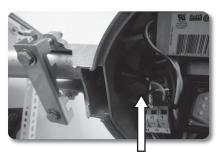

Input Cable

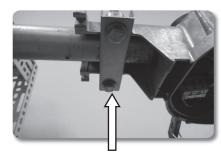

Screw tightly to the pole